

CAELearningSpace

Server-Based System Setup Guide



CAE

905K463452 (v4-DellR340)

Copyright © CAE Healthcare Academy 2022. All rights reserved. No part of this document may be reproduced without written consent from CAE Healthcare Academy.

905K463452 (v4-DellR340)

CAE Healthcare
6300 Edgelake Dr
Sarasota, FL 34240
USA
Tel +941-377-5562
caehealthcare.com

Dear Valued Customer,

Congratulations, and thank you for your recent purchase of the CAE LearningSpace Connect Server system. This guide will help you get started using CAE LearningSpace. In addition, a CAE LearningSpace user guide is available from within the CAE LearningSpace web software.

The CAE LearningSpace Connect Server system includes the following components:

- CAE LearningSpace software (web-based)
- CAE LearningSpace Connect Server (hardware)

If you have any questions or comments, please email CAE LearningSpace Customer Service in North America at **avs-support@cae.com** (phone 1-866-462-7920).

International Customer Service information is available at **<https://caehealthcare.com/contact-us/>**

NOTE: When contacting customer service, please have the serial number and ID available. They are located on the ID sticker placed on the top of the server.

CAE LearningSpace

Server-Based System Setup Guide

Welcome to CAE LearningSpace!

This guide will help you get started using CAE LearningSpace - intelligent recording, easy debriefing. It will explain how to get your system started.


| | |
|--|----|
| 1.0 Equipment Setup (Server-Based) | 6 |
| 2.0 Initial Network Setup | 8 |
| 2.1 To configure your server as a MASTER Connect Server: | 8 |
| 2.2 To configure your server as a SLAVE Connect Server: | 10 |
| 2.3 Note about Continuing after Network Setup | 11 |
| 3.0 Licensing | 12 |
| 4.0 Initial System Setup | 13 |
| 5.0 Connecting simulators | 16 |
| 5.1 Connecting CAE simulators wirelessly | 16 |
| 5.2 Connecting CAE simulators using a wired connection | 17 |
| 5.3 Connecting third-party (non-CAE) simulators | 18 |

1.0 Equipment Setup (Server-Based)

Upon receipt of your CAE LearningSpace Connect Server, remove the equipment from the packaging and set it up.

1.1 Unpack the server.

IMPORTANT: The slave and master Connect Servers are identical with respect to hardware component configuration.

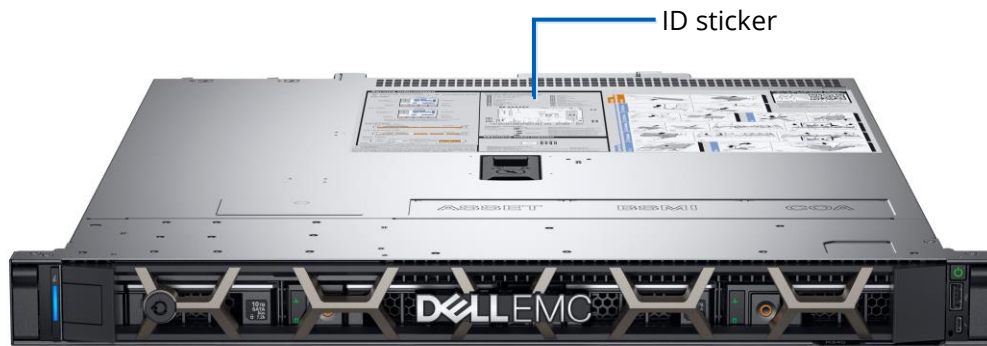

CAE LearningSpace Connect Server (front)




CAE LearningSpace Connect Server (front open)



CAE LearningSpace Connect Server (back)

- 1.2. Connect one end of an Ethernet cable to the institution network and the other end to GB1/Port1.*

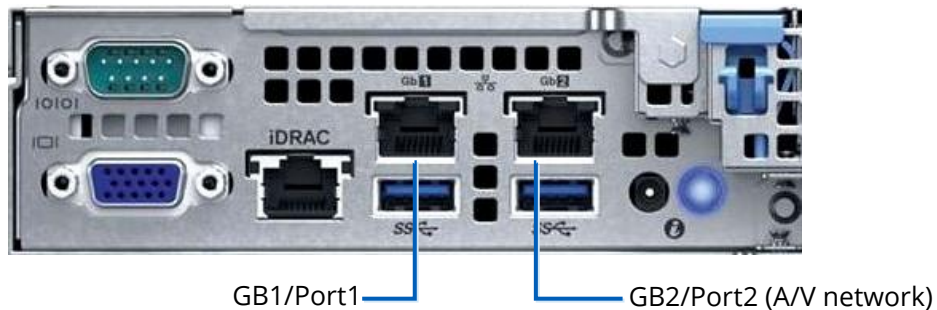

GB1/Port1 and GB2/Port2 on the Connect Server (back)

NOTE: The default client access port is GB1/Port1, which is dedicated to the institution network. If it is not required to have the client access via the institution network, GB2/Port2 (A/V network) can be used for client access instead.

- 1.3. To power on the server, push the Power button on the front of the server. (See image on page 6.)

NOTE: To power off the server (proper shutdown), push the power button briefly - it is not necessary to keep the button pushed in longer than a keystroke - and wait until the power led turns off.

- 1.4. During the setup process (see *2.0 Initial Network Setup*), connect your client computer to GB2/Port2 (A/V network).**

IMPORTANT: Only GB2/Port2 (A/V network) can be used during the initial network setup. DHCP service runs only on this port.

* If unsure, please consult with your local IT.

** Client computer is not supplied.

2.0 Initial Network Setup

This section will walk you through how to configure your CAE LearningSpace Connect Server as a

- MASTER Connect Server (see **2.1**)
- SLAVE Connect Server (see **2.2**)

and helps you set up your server network connection and create the initial login:


2.1 To configure your server as a MASTER Connect Server:

2.1.1 Ensure your client computer is connected to the server GB2/Port2 (A/V network) with an Ethernet cable.

IMPORTANT: Make sure that this is the only network connection on your computer, and the wired interface is set to DHCP.

2.1.2 Open your browser and enter the address: **<http://setup.learning.space>**

The CAE LearningSpace initial setup screen appears.

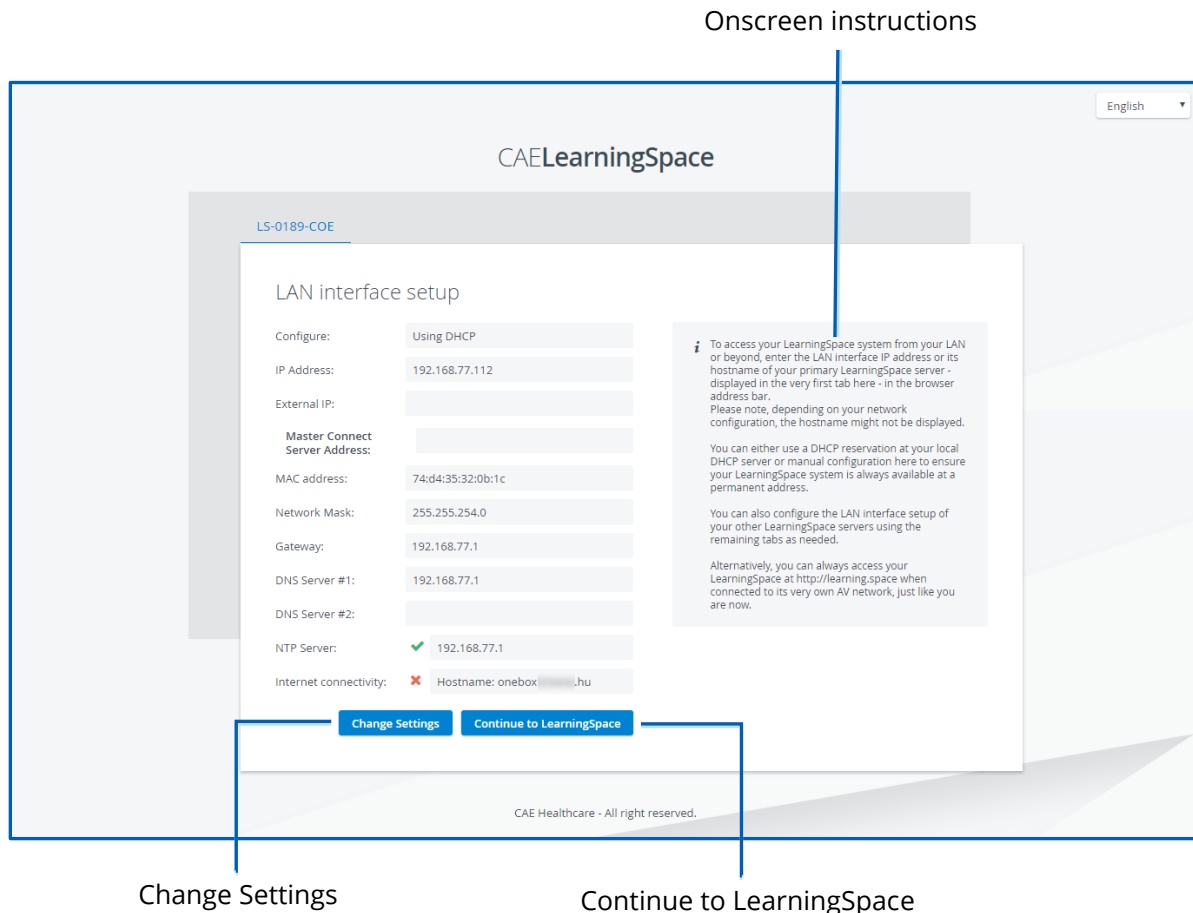

2.1.3 Follow the on-screen instructions.

2.1.4 Click the **Change Settings** button at the bottom of the window.

IMPORTANT: When configuring a master Connect Server, leave the **Master Connect Server Address** field empty. The Master Connect Server is the host of the CAE LearningSpace system.

All settings become editable:

Master Connect Server Address field

The screenshot shows a configuration window for the Master Connect Server. The 'Configure' section has two radio buttons: 'Using DHCP' (selected) and 'Manually'. Below this are several input fields: 'IP Address:*' (192.168.77.112), 'External IP:', 'Master Connect Server Address:' (highlighted with a red box), 'MAC address:' (74:d4:35:32:0b:1c), 'Network Mask:*' (255.255.254.0), 'Gateway:*' (192.168.77.1), 'DNS Server #1:' (192.168.77.1), 'DNS Server #2:', and 'NTP Server:*' (192.168.77.1). At the bottom are 'Save Settings' and 'Cancel' buttons. A callout box on the right contains an information icon and text: 'To access your LearningSpace system from your LAN or beyond, enter the LAN interface IP address or its hostname of your primary LearningSpace server - displayed in the very first tab here - in the browser address bar. Please note, depending on your network configuration, the hostname might not be displayed. You can either use a DHCP reservation at your local DHCP server or manual configuration here to ensure your LearningSpace system is always available at a permanent address. You can also configure the LAN interface setup of your other LearningSpace servers using the remaining tabs as needed. Alternatively, you can always access your LearningSpace at http://learning.space when connected to its very own AV network, just like you are now.'

Initial Setup screen with editable settings

IMPORTANT: All fields marked with an asterisk (*) are required.

2.1.5 When you are finished with editing, click **Save Settings**.

2.1.6 The MASTER Connect Server configuration is complete.

You can continue with the **Continue to LearningSpace** button or enter **learning.space** in the browser.

2.2 To configure your server as a SLAVE Connect Server:

2.2.1 Follow the above instructions in 2.1 until the Initial Setup screen becomes editable:

Master Connect Server Address field

The screenshot shows the 'Initial Setup screen with editable settings'. The 'Configure:' section has 'Using DHCP' selected. The 'Master Connect Server Address' field is highlighted with a red box and a blue callout line pointing to a text box on the right. The text box contains the following information:

To access your LearningSpace system from your LAN or beyond, enter the LAN interface IP address or its hostname of your primary LearningSpace server - displayed in the very first tab here - in the browser address bar. Please note, depending on your network configuration, the hostname might not be displayed.

You can either use a DHCP reservation at your local DHCP server or manual configuration here to ensure your LearningSpace system is always available at a permanent address.

You can also configure the LAN interface setup of your other LearningSpace servers using the remaining tabs as needed.

Alternatively, you can always access your LearningSpace at <http://learning.space> when connected to its very own AV network, just like you are now.

Initial Setup screen with editable settings

2.2.2 To configure a slave Connect Server, enter the master Connect Server's hostname or IP address in the **Master Connect Server Address** field and all other required information.

IMPORTANT: All fields marked with an asterisk (*) are required.


2.2.3 When you are finished with editing, click **Save Settings**.

2.2.4 The SLAVE Connect Server configuration is complete.

You can continue with the **Continue to LearningSpace** button or enter **learning.space** in the browser.

2.3 Note about Continuing after Network Setup

In case the license of the software was already activated (see **3.0**), the **Continue to LearningSpace** button or the *learning.space* URL directs you to the **Initial Settings** tab (see 4.3 in **4.0**), where you are required to provide the Admin login credentials (password and email) and location.

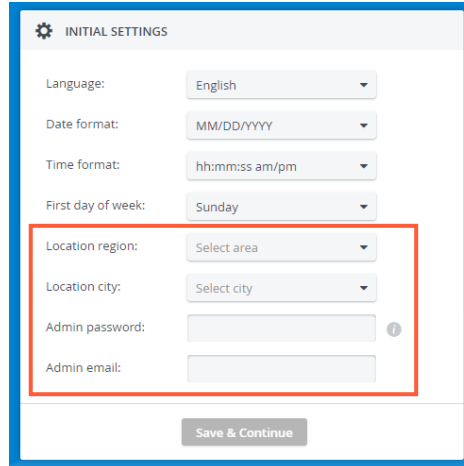

The screenshot shows the 'INITIAL SETTINGS' configuration page. It includes the following fields:

- Language: English
- Date format: MM/DD/YYYY
- Time format: hh:mm:ss am/pm
- First day of week: Sunday
- Location region: Select area
- Location city: Select city
- Admin password: [input field]
- Admin email: [input field]

A red rectangular box highlights the 'Location region', 'Location city', 'Admin password', and 'Admin email' fields. At the bottom of the form is a 'Save & Continue' button.


In this way, you skip logging in with the default email address and password (see 4.2). If you need to activate the license, continue to **3.0**, then **4.0**. After license activation, use the default email address and password provided by the guide for the first login.

3.0 Licensing

Following the network setup, the purchased CAE LearningSpace software can be activated online (3.2.1) by connecting to the Internet or offline (3.2.2) – if the internet connection was not detected successfully – by contacting the CAE support team.

IMPORTANT: During the activation process, the server cannot be shut down.

3.1 The **Continue to LearningSpace** button or *learning.space* leads you to the licensing page (unless the licensing has already been concluded).

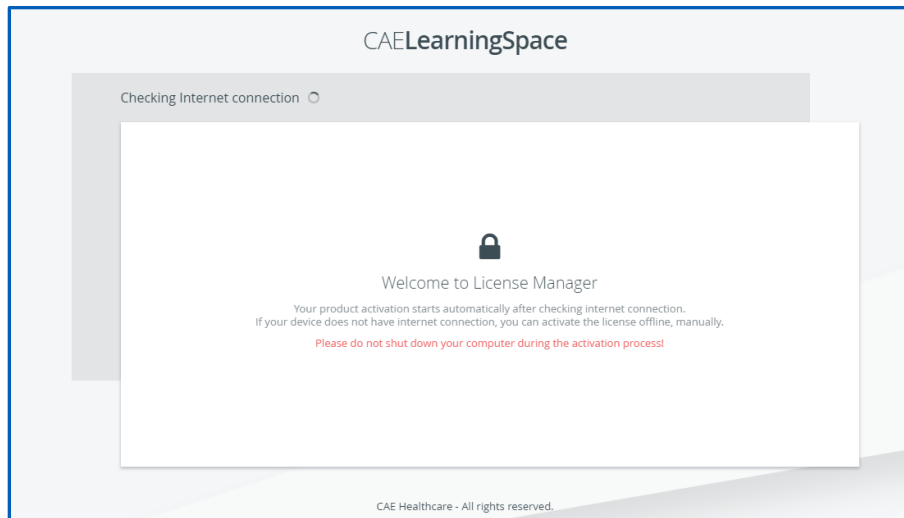


Detecting internet connection on the licensing page

3.2 The system checks for internet connection.


Click the **Start Activation** button on the licensing page to proceed.

3.2.1 Online activation

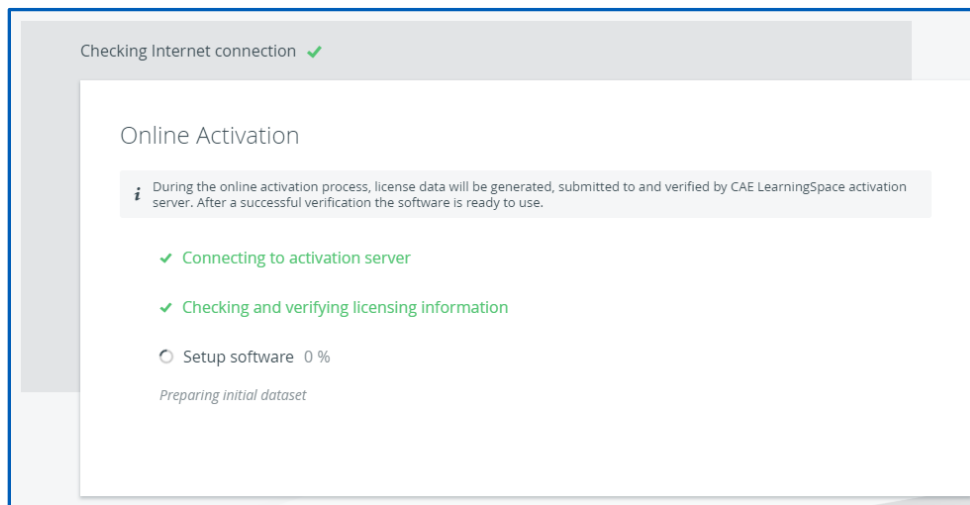

Online licensing page

The license verification runs automatically, and once completed, a system message is displayed with a **Login** button to proceed to the login page.

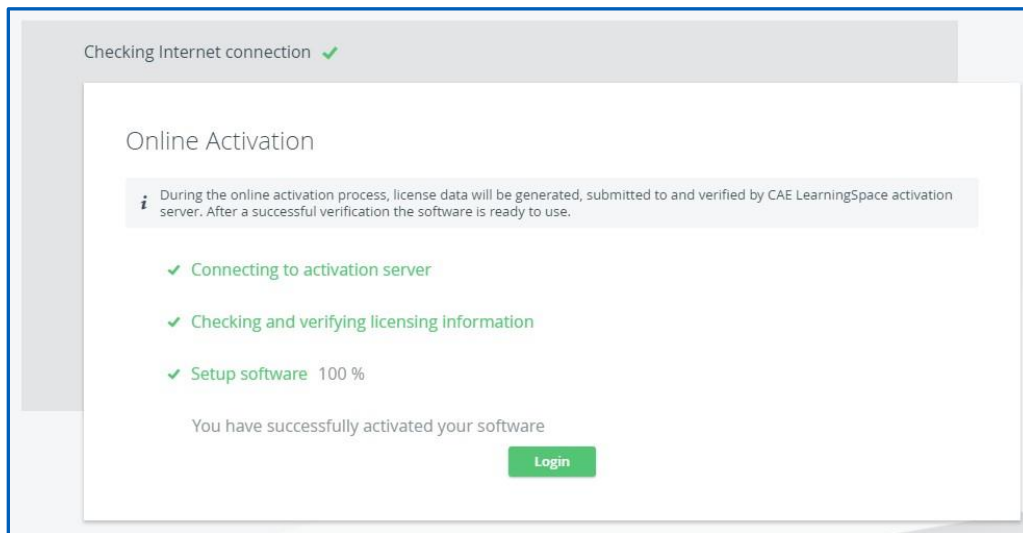


Completed online licensing

3.2.2 Offline activation

IMPORTANT: Please have the serial number ready to identify your unit.

Call CAE LearningSpace support to receive your Activation Code.

Enter the activation code in the designated field of the offline licensing page.

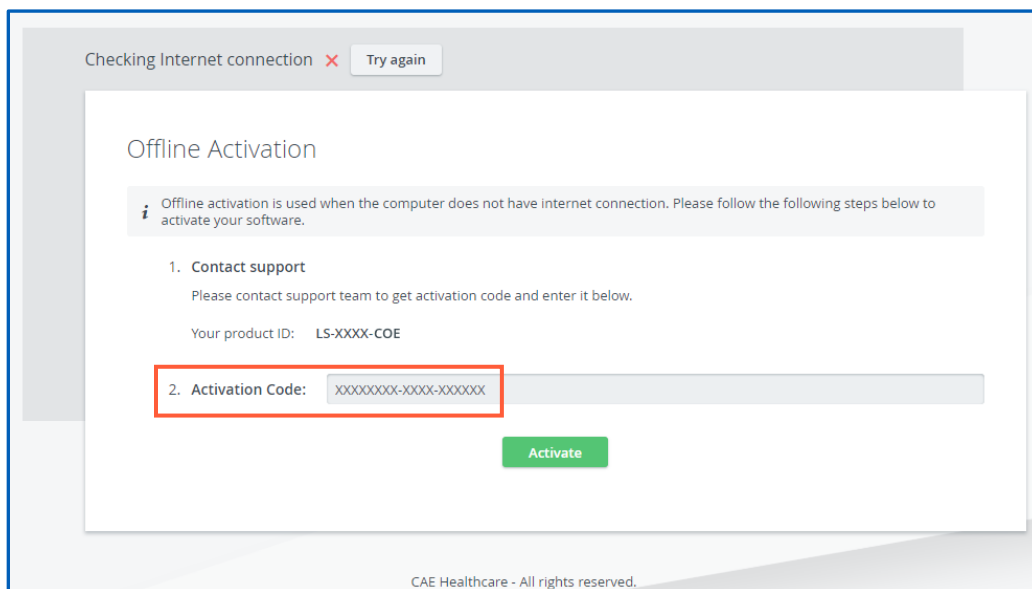


Offline licensing page

905K463452 (v4-DellR340)


4.0 Initial System Setup

 Once the licensing is successfully concluded, the **Login** button is displayed.



Activation success message and login button

4.1 Click **Login**, and you will land on the login page:

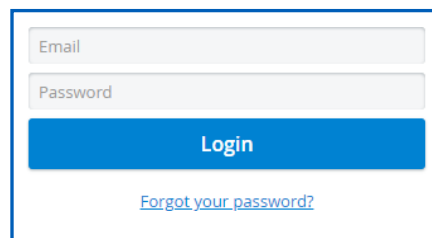A screenshot of the LearningSpace login page. It features two input fields: "Email" and "Password". Below these fields is a blue button labeled "Login". At the bottom of the form, there is a blue link that says "Forgot your password?".

LearningSpace login fields


4.2 Logging in for the first time, enter the default email address and password:

email: admin@learning.space

password: mls#changeme

You will be redirected to the **Initial Settings** tab.


4.3 Change the default email address and password on the first login. Admin password, email, and location fields are required before continuing.

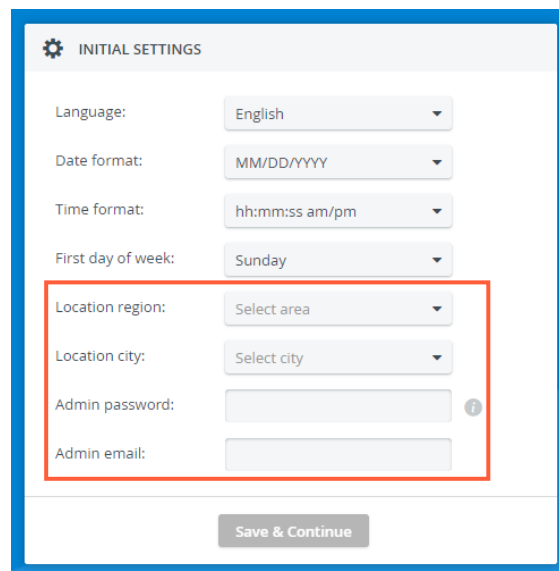A screenshot of the "INITIAL SETTINGS" page. The page has a gear icon and the title "INITIAL SETTINGS". It contains several settings: "Language" (English), "Date format" (MM/DD/YYYY), "Time format" (hh:mm:ss am/pm), and "First day of week" (Sunday). Below these are four fields: "Location region" (Select area), "Location city" (Select city), "Admin password" (with a question mark icon), and "Admin email". A red box highlights the "Location region", "Location city", "Admin password", and "Admin email" fields. At the bottom of the page is a "Save & Continue" button.

NOTE: Passwords have to meet a minimum requirement to ensure the security of your user accounts. The new password has to be 8 characters or longer and has to include at least one of each of the following characters: lower case letters, upper case letters, numbers, and special characters/symbols.

You can change other settings (e.g., language, time format, etc.) with the help of drop-down menus (optional).

When all required fields are filled, the **Save & Continue** button becomes active.

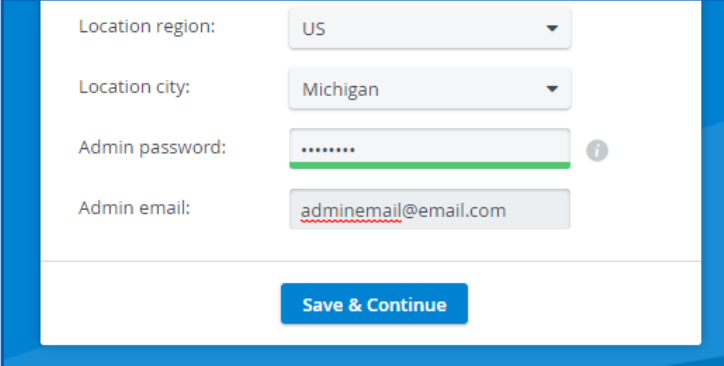

The screenshot shows a form with four input fields and a button. The fields are: 'Location region' with a dropdown menu showing 'US'; 'Location city' with a dropdown menu showing 'Michigan'; 'Admin password' with a masked field of seven dots and a green progress bar below it; and 'Admin email' with the text 'adminemail@email.com'. A blue 'Save & Continue' button is positioned at the bottom center of the form.

4.4 Click **Save & Continue**, and the system redirects you to the home page.

For further information on the software, please find the help site of the product you are using at <https://help.caelearningspace.com>

5.0 Connecting simulators

After the initial setups are completed: equipment, network, licensing, and system setup, you can continue with connecting your simulators to your system.

Every CAE LearningSpace system can capture simulator signals of any kind.

The setup guide distinguishes between the following types of simulators:


- CAE simulators with wireless connection
- CAE simulators with a wired connection
- Third-party (non-CAE) simulators

5.1 Connecting CAE simulators wirelessly

IMPORTANT: To connect a CAE simulator wirelessly, a CAE Simulator Bridge is required, which can be purchased separately.

In case of using wireless CAE simulators, do the following:

5.1.1 Connect a switch to GB2/Port2 (A/V network) with an Ethernet cable.

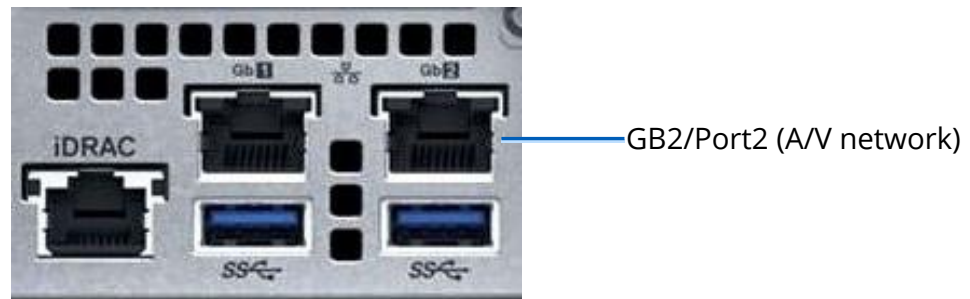

Connect Server GB2/Port2 (A/V network) on the back of the server


5.1.2 Connect one of the LAN A/V network ports of your CAE Simulator Bridge to the switch with an Ethernet cable. (See **5.2.2** for LAN A/V network ports.)

5.1.3 CAE LearningSpace has to establish a wireless connection with the CAE simulator, to check connection:

5.1.4 Go to **System** → **Simulators**, select the **Controls** cogwheel on the left panel (under Wireless Bridges) and select the wireless network of the simulator.

In case the CAE simulator is not listed when trying to connect to the WiFi network:

- Make sure the simulator is powered on.
- Move the Simulator Bridge closer to the simulator.

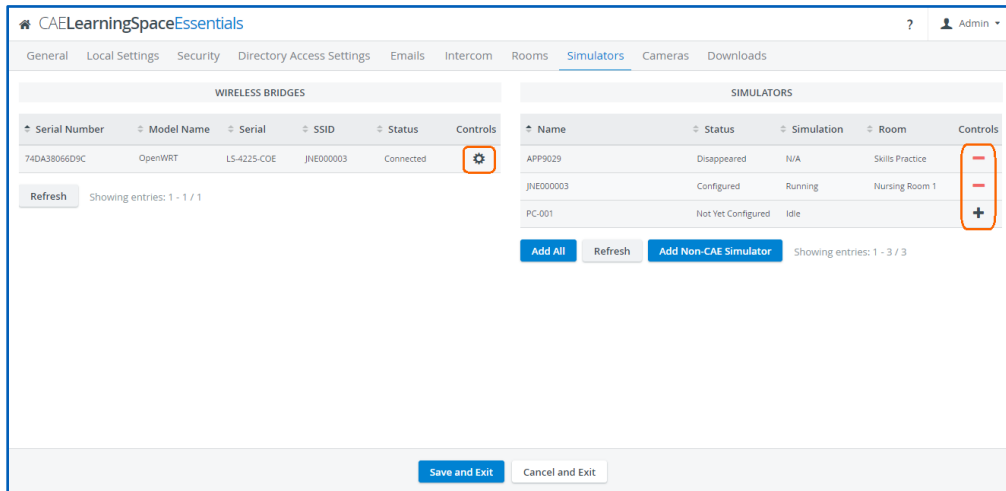

Simulators tab in System

5.1.5 Connect to the selected CAE simulator.

5.1.6 The CAE simulator will show up within 10-30 seconds on the right-side panel.

5.1.7 After adding the simulator using the **+** icon, you can add the simulator to the desired room, using the **Rooms** tab.

5.2 Connecting CAE simulators using a wired connection

IMPORTANT: To connect a wired CAE simulator, a CAE Simulator Bridge is required, which can be purchased separately.

In case of using a CAE simulator with a wired connection, do the following:


5.2.1 Connect a switch to GB2/Port2 (A/V network) with an Ethernet cable.



GB2/Port2 (A/V network)

Connect Server GB2/Port2 (A/V network) on the back of the server

5.2.2 Connect your CAE Simulator Bridge to the switch with an Ethernet cable.

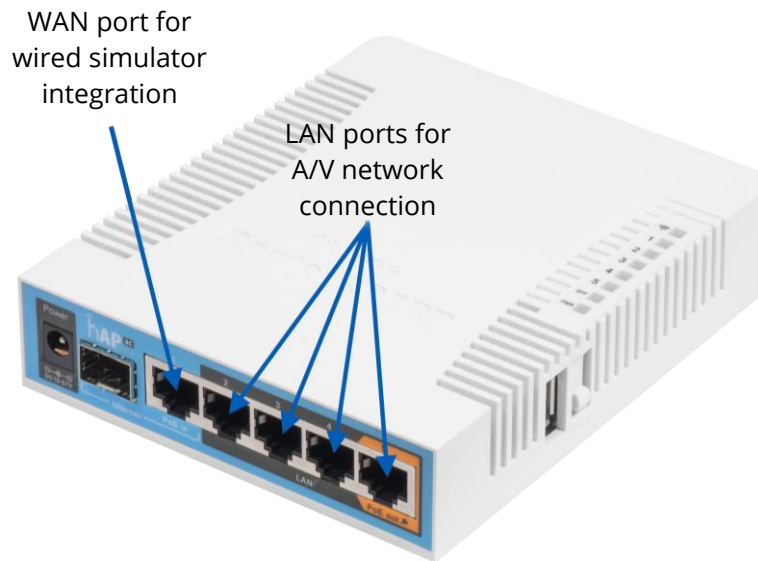

CAE Simulator Bridge and ports

Make sure to use a LAN port on the CAE Simulator Bridge to connect to the switch. The LAN ports of the CAE Simulator Bridge are dedicated to the A/V network.

5.2.3 Connect your simulator with an Ethernet cable to the WAN port of the CAE Simulator Bridge.

5.2.4 Make sure the simulator is turned ON.

5.2.5 Check for the simulator in the **Simulators** panel in **System** → **Simulators** if it is listed. (It will appear in 10-30 seconds.)

5.2.6 Click the desired icon in the **Controls** column to add or remove the simulator.

5.2.7 To add the simulator to the desired room, use the **Rooms** tab.

5.3 Connecting third-party (non-CAE) simulators

Third-party (non-CAE) simulator signals are captured using display capture technology.

IMPORTANT: To connect a third-party simulator, a CAE DCU (display capture unit) is required, which can be purchased separately.

In case of using third-party simulators, do the following:

5.3.1 Check the video output of the waveform display of the third-party simulator; it can be VGA, DVI, HDMI.

5.3.2 Select the appropriate video cable or adapter you need for connecting the simulator to CAE DCU's frame grabber:

NOTE: The CAE DCU's frame grabber has a DVI input.

- a. Use a **VGA to DVI video cable** to capture signals from non-CAE simulators with VGA output.
 - b. Use a **DVI to DVI video cable** to capture signals from non-CAE simulators with DVI output.
 - c. Use an **HDMI to DVI adapter** to capture signals from non-CAE simulators with HDMI output. Plug the adapter to a DVI cable.
- 5.3.3 Run the appropriate video cable between the input of the frame grabber and the video output of the third-party simulator's waveform display and connect them.
- 5.3.4 You need to locate the DCU on the **Cameras** tab and add it to a room on the **Rooms** tab.

CAELearningSpace

caehealthcare.com

For more information about CAE Healthcare products, contact your regional sales manager or the CAE Healthcare distributor in your country or visit caehealthcare.com. Tel +1 941-377-5562 or 866-233-6384

For customer service, please contact CAE Healthcare.

United States

Monday - Friday
from 7:00 a.m. to 6:00 p.m.
ET Phone 1-866-462-7920

Canada

Monday - Friday
from 8:00 a.m. to 5:00
p.m.
ET Phone 1-877-223-6273

International

Monday - Friday
from 7:00 a.m. to 6:00 p.m.
ET Phone + 1-514-341-6780

LearningSpace Customer Service by Email

avs-support@cae.com

©2022 CAE Healthcare
905K463452

